

Product features:



Solar powered

Your Theo device is solar powered with a built in battery that gets it power from the sun. In normal circumstances, you shouldn't need to charge your device.



Voice Assistance

In the event of a potential accident, Theo may speak to you to provide assistance.




Become a better driver

Your driving app provides you with a personalised driving score, mapped journeys, and events, enabling you to track your driving behaviour and become a safer driver.

What's in the box?


Theo device

Facing outside the car

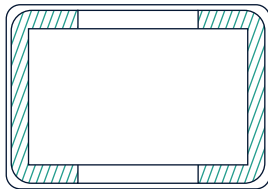

3M plastic film
(on each side)

Facing inside the car

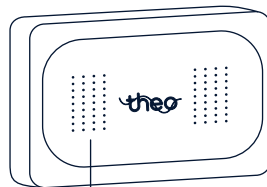


Speakers

Side



LED light
(for battery power)

USB-C
(for charging battery)

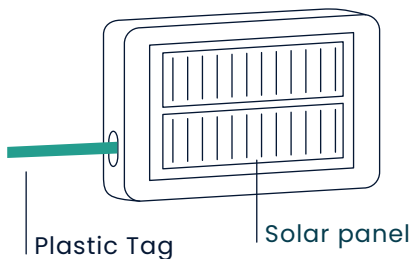


Plastic Tag

Solar panel

USB-C Cable

Charging Cable

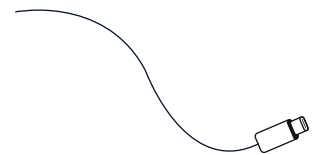

Your Theo is solar powered, so in most circumstances you won't need to charge your device. However, we've included a USB-C cable just in case we notify you via text or email asking you to charge your Theo.

Step by Step Guide


Reminder: If you haven't already, please download and log into your driving app



Installation Instructions

Scan this QR Code with your smartphone's camera to watch the installation video.


1.

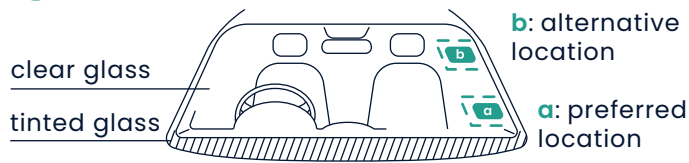

When deciding where to locate your Theo, please pick the **bottom left hand side of your windscreen**. If this isn't possible, please locate your Theo in the top left hand side of your windscreen.

i Ensure the solar panel can access direct sunlight. Do not install your Theo device too close to the dashboard or on tinted glass.

2.

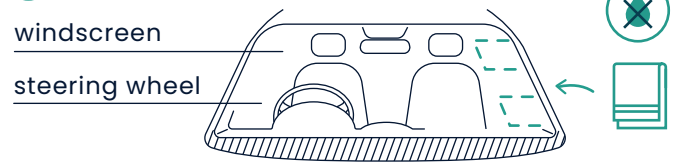


Ensure the **inside** of your windscreen is **clean and dry** in the area where you are locating your Theo.

Use either a lint free cloth or kitchen towel to completely dry the area before installing your device.

i **Do not** use any chemicals when cleaning the windscreen and make sure it is **completely dry**, using the windscreen heater if necessary.


3.

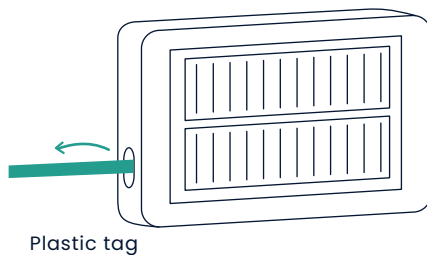

Pull the plastic tag completely out from the Theo device.

i Only remove immediately prior to installation.


4.

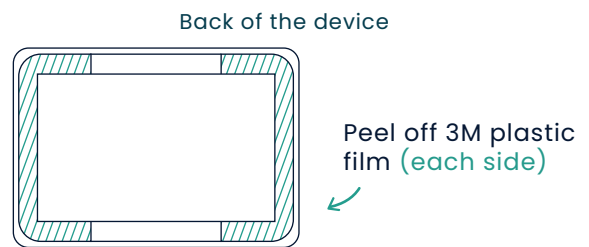

Gently peel off the 3M plastic film in each corner of the windscreen cradle.

i Ensure you do not remove the foam attached to the back of the device.

5.

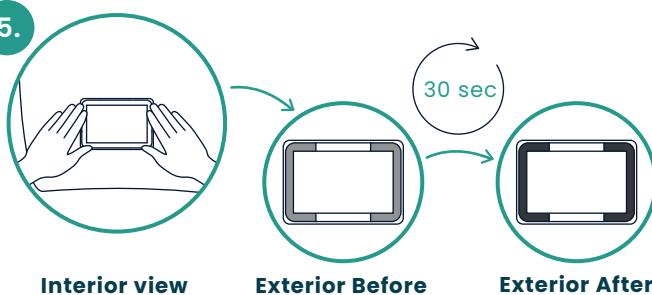

Theo should be readable from the inside to ensure your device is correctly orientated. In the same area you cleaned, press the device firmly against your windscreen from inside your vehicle.

Apply firm pressure to the device for at least 30 seconds to ensure it is securely stuck on the inside of your windscreen.

i Ensure your device is placed on clear glass and can easily absorb sunlight.

Press firmly on the whole device until the adhesive, viewed from the outside, is the same colour all the way round and any air bubbles have disappeared.

6.



Your Theo device is now ready to go!

It's now time to take a photo of your installed device. Remember to include the device and your vehicle registration number in the photo.

To upload it, use the link in the email we sent you when you received your device.

Don't forget to log into the app to ensure you're fully ready to go.